


MKP-S – Stainless Steel Self-Priming Magnetic Drive Chemical Process Pump

Efficient – Robust – Safe

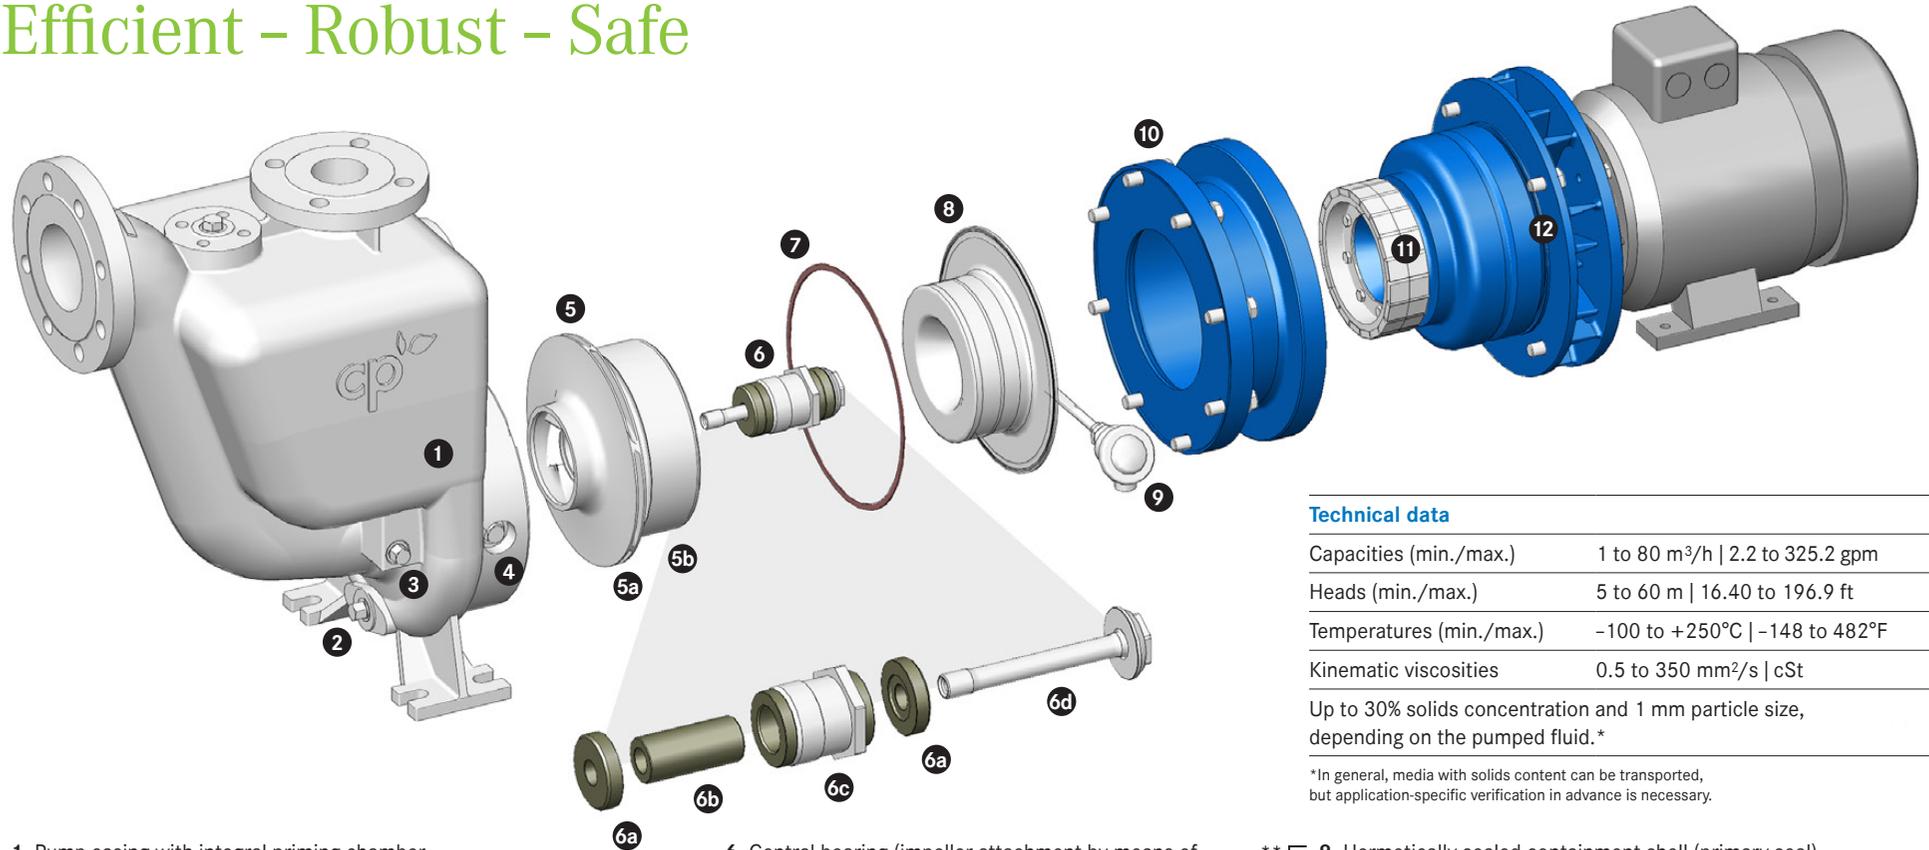

Technical data

Capacities (min./max.)	1 to 80 m ³ /h 2.2 to 325.2 gpm
Heads (min./max.)	5 to 60 m 16.40 to 196.9 ft
Temperatures (min./max.)	-100 to +250°C -148 to 482°F
Kinematic viscosities	0.5 to 350 mm ² /s cSt

Up to 30% solids concentration and 1 mm particle size, depending on the pumped fluid.*

*In general, media with solids content can be transported, but application-specific verification in advance is necessary.

- 1 Pump casing with integral priming chamber
- 2 Casing drain
- 3 Internal bearing lubrication or external flush connection
- 4 Pt100 temperature probe connection
- 5 Impeller unit consisting of:
 - 5a Impeller
 - 5b Driven magnet assembly attached to impeller (on product side)

- 6 Central bearing (impeller attachment by means of locking sleeve) consisting of:
 - 6a Thrust bearing ring
 - 6b Bearing sleeve
 - 6c Bearing bush assembly
 - 6d Clamping sleeve
- 7 Casing seal

- 8 Hermetically sealed containment shell (primary seal)
- 9 Containment shell thermocouple
- 10 Lantern
- 11 Outside magnetic coupling attached to the flywheel mass (on atmosphere side)
- 12 Secondary seal (optional)

CP's unique drive principle **without plain bearing carrier.